


Paper Feed and Roller Maintenance

Fax maintenance/Troubleshooting:

The rubber rollers on the fax machine need to be cleaned about every two (2) months to ensure proper paper feeding.

1. Take a swab/Q-tip and dip in rubbing alcohol, making sure to squeeze out any excessive liquid
2. Rub swab all around the rubber rollers (only) removing dirt and grime.

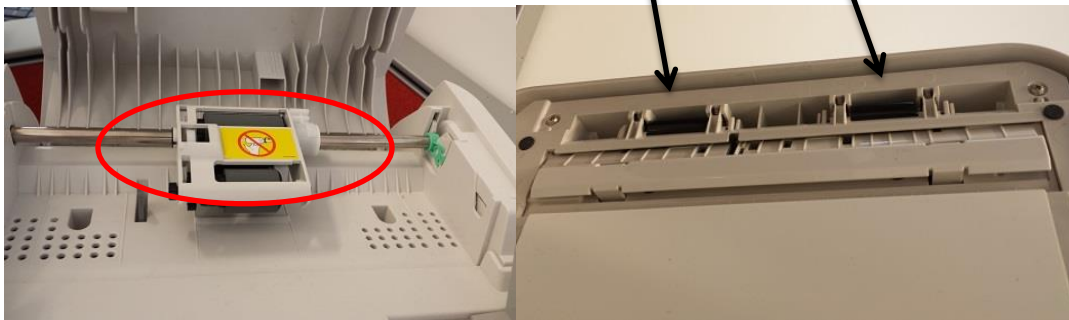

3. Glass should also be cleaned with rubbing alcohol and a soft clean cloth.
4. Allow ample time for drying before use